



Montáž presklennej striešky

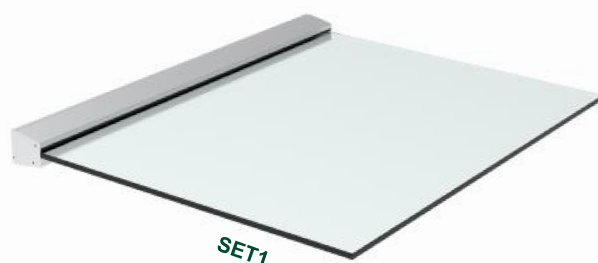






Inšalačný manuál pre presklenné striešky:

- AL/PR7-1500-N-E-SET1 •AL/PR7-1500-R7016-SET1
- AL/PR7-1500-N-E-SET2 •AL/PR7-1500-R7016-SET2
- AL/PR7-1500-N-E-SET3 •AL/PR7-1500-R7016-SET3


- AL/PR7-3000-N-E-SET1 •AL/PR7-3000-R7016-SET1
- AL/PR7-3000-N-E-SET2 •AL/PR7-3000-R7016-SET2
- AL/PR7-3000-N-E-SET3 •AL/PR7-3000-R7016-SET3

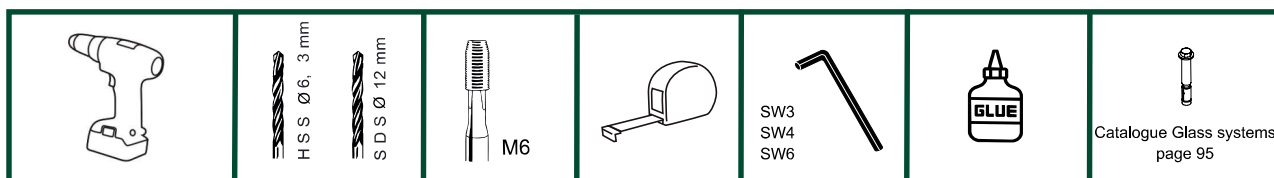


KOMONENTY

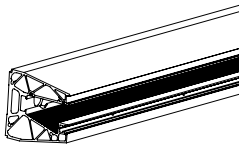		SET1		SET2		SET3	
		1500	3000	1500	3000	1500	3000
1		1x		1x		1x	
			1x		1x		1x
2		1x	2x	2x	3x	1x	2x
3		1x	2x	1x	2x	1x	2x
		1x	2x	1x	2x	1x	2x
		1x	2x	1x	2x	1x	2x
4		7x	14x	7x	14x	7x	14x
5		7x	14x	7x	14x	7x	14x
6		7x	14x	7x	14x	7x	14x
7		7x	14x	7x	14x	7x	14x
8		7x	14x	7x	14x	7x	14x
9		2x	4x	2x	4x	2x	4x
10		2x	2x	1x	1x		
11				1x	1x		
12				2x	2x		
13						1x	1x
14						4x	4x
15		6x	6x	6x	6x		
16		2x	2x				


1.

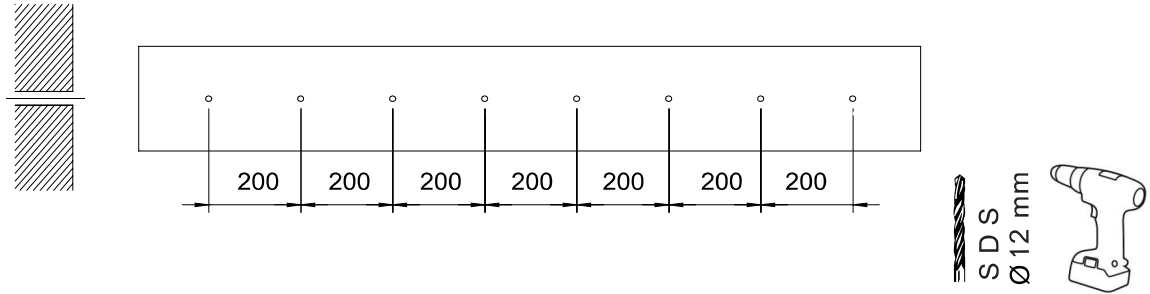


2.

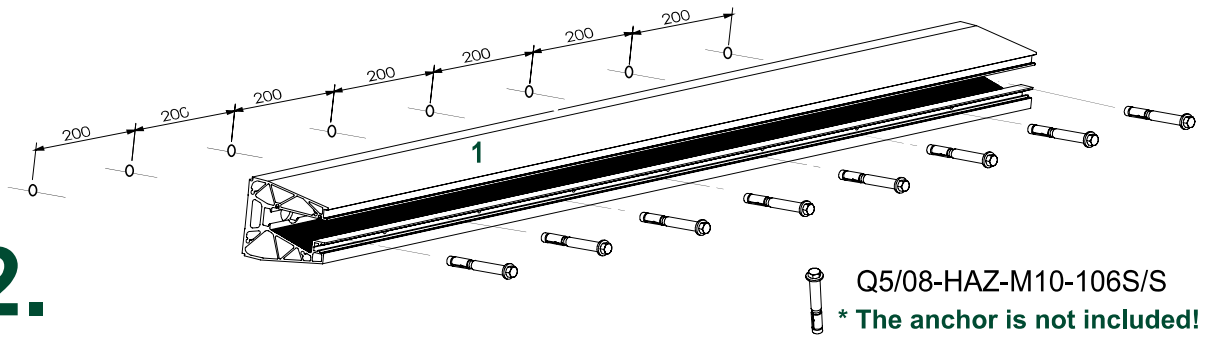

3.

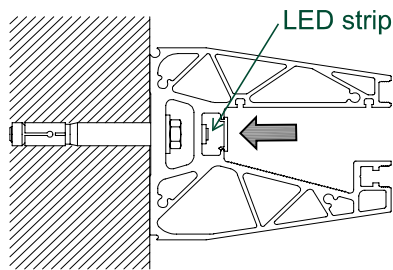


4.

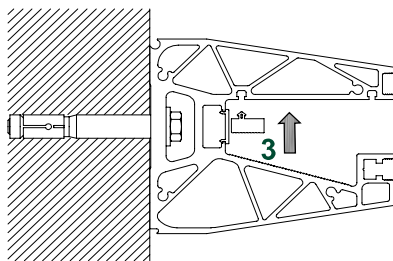


Glass	12,76	16,76	20,76
Glass inlay			


5.

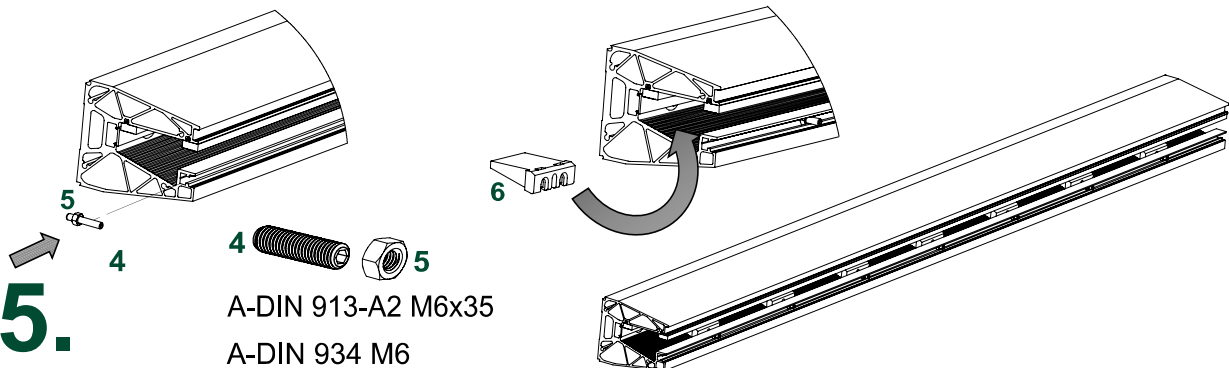

6.

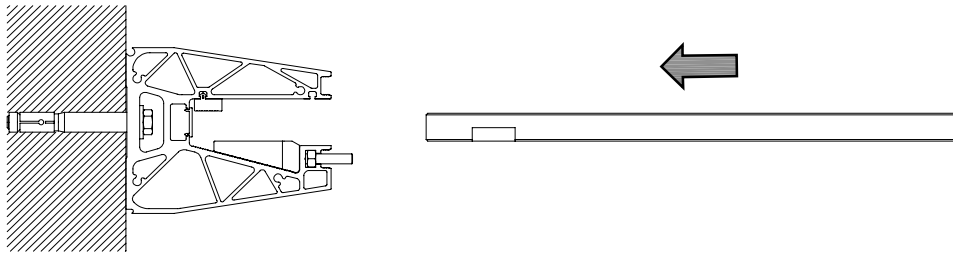


7.

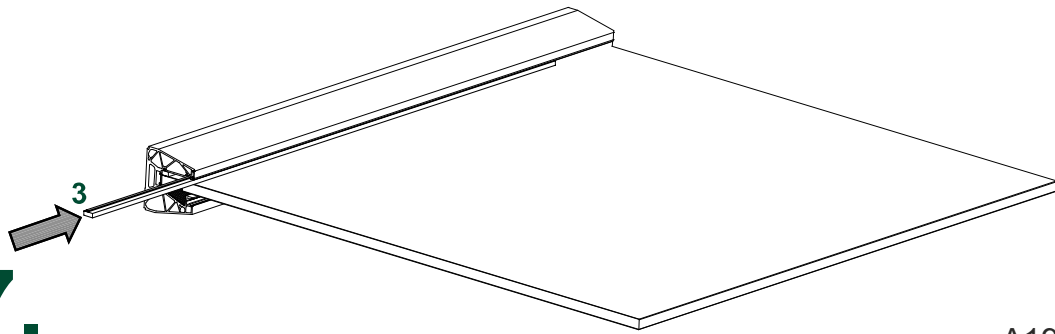

A19/PR7-3...


8.

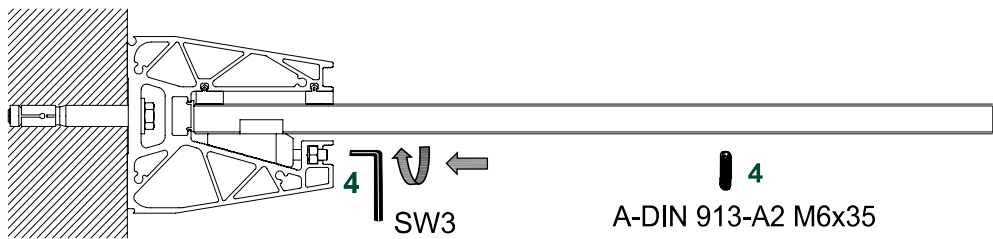

A-DIN 913-A2 M6x35




9.

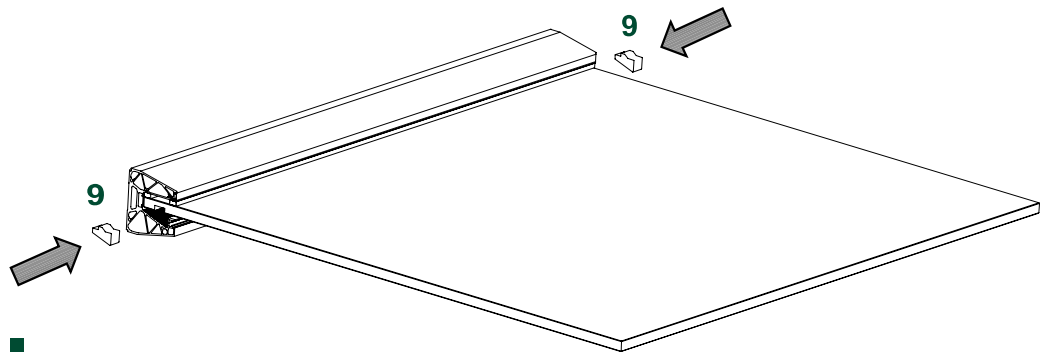

A19/PR7-2



AL/PR7-xxx-SET1


10.1

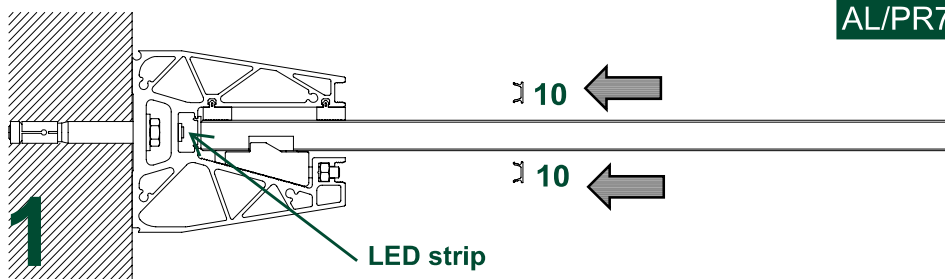

10

10

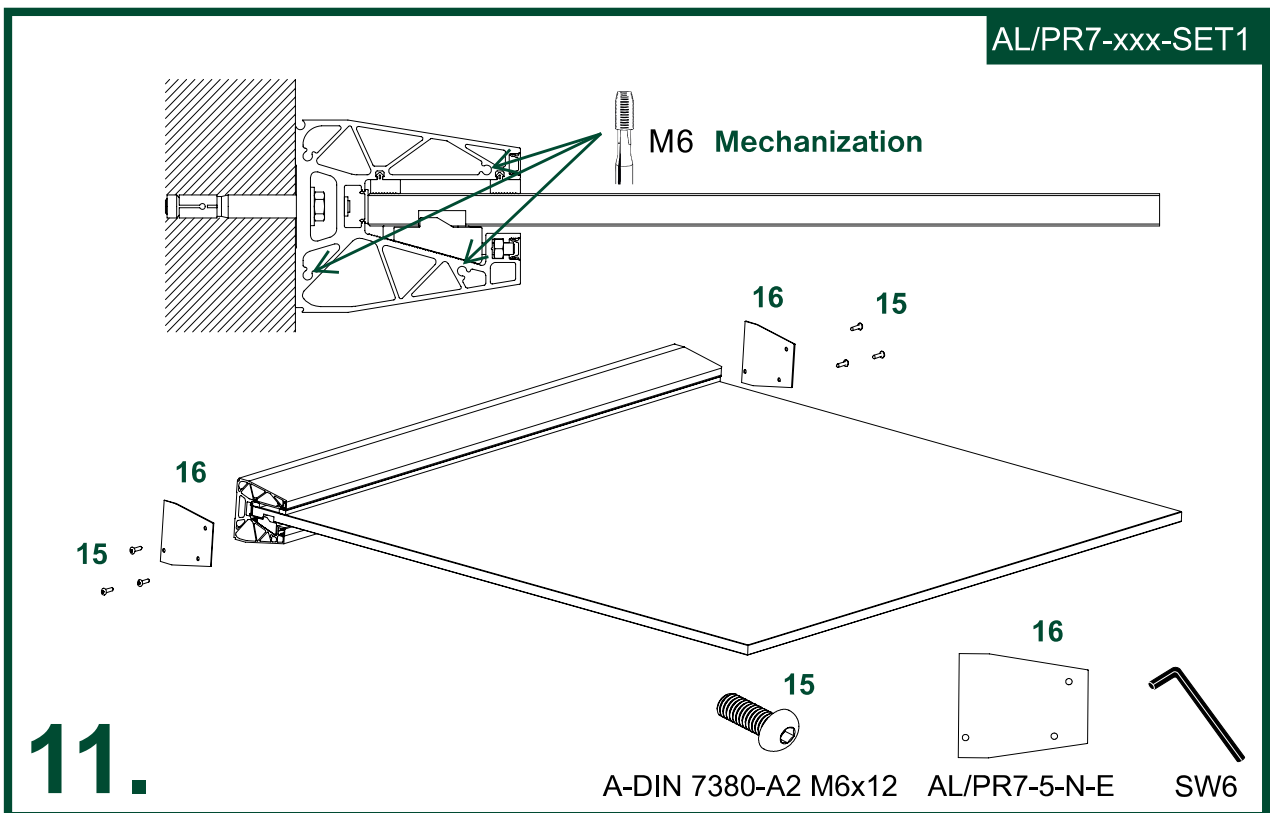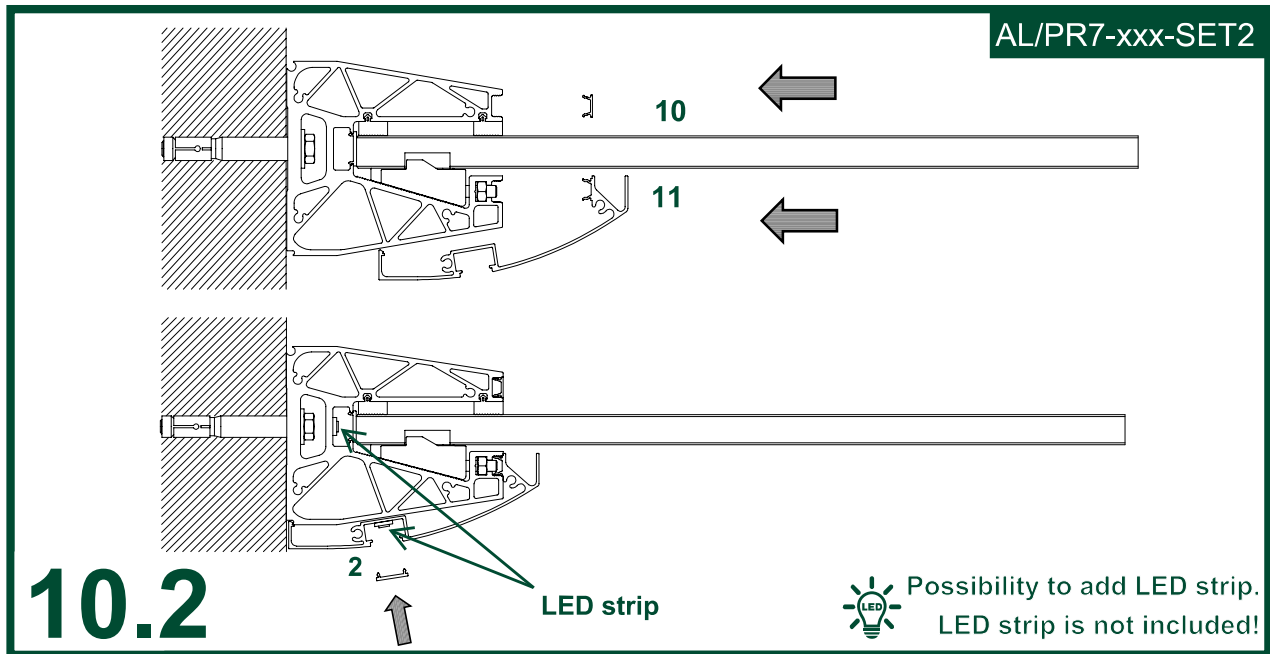

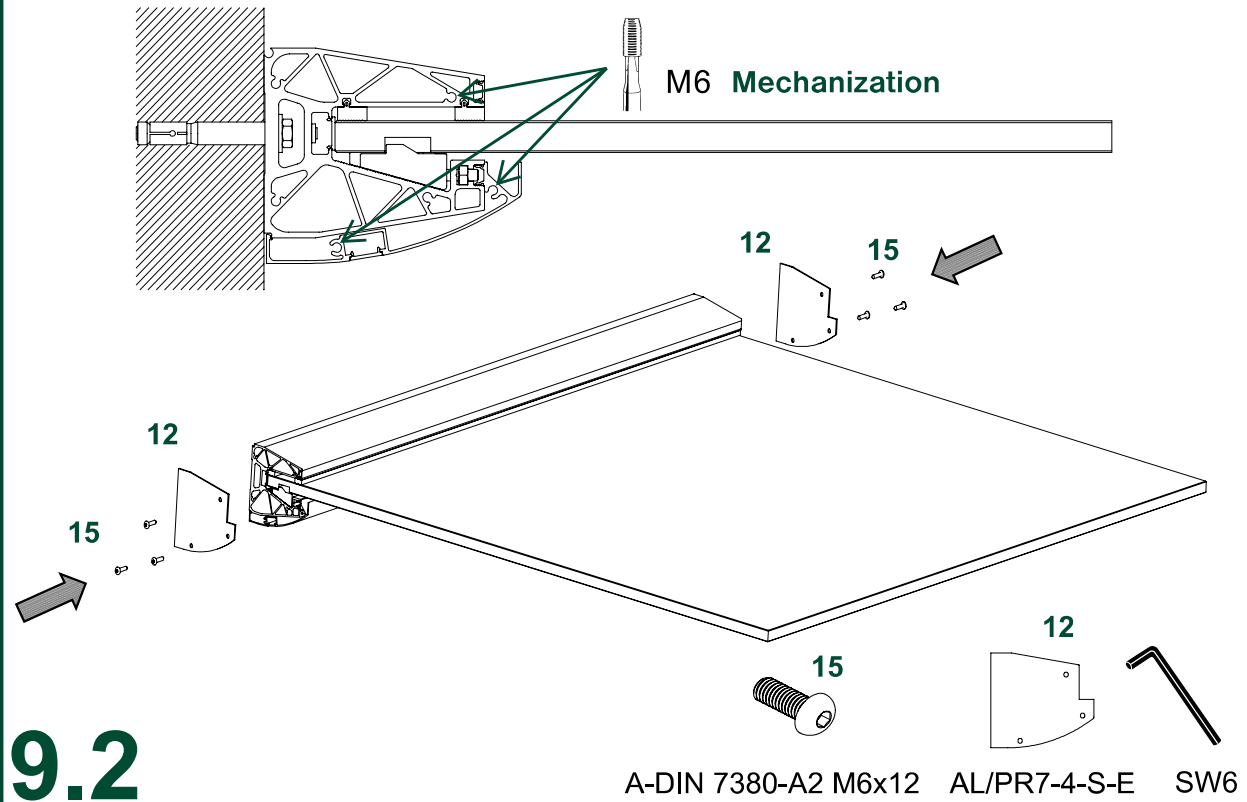

FIXATION / DISMANTLING THE WEDGES

